

How to install "Easy Home Control KIT - 1"

Installation Guide Date: 06 June 2013





1. About this document

This document is about how to install <u>Denkovi "Easy Home Control KIT - 1"</u> Denkovi Assembly Electroncs LTD reserves the right to change the information this document without any notification.



2. The KIT includes










USB 4 Relay Board - **1 pcs**

USB to One Wire adapter - **1 pcs**

DS18S20 Sensor -**4 pcs**

USB Cables - 2 pcs (optional)

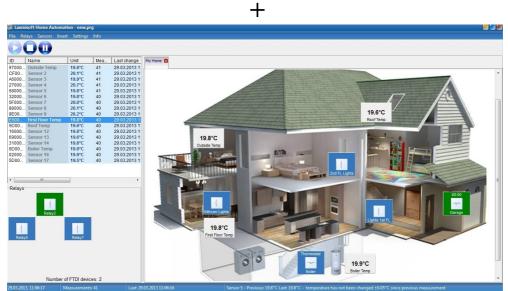


One license for PC Home Automation Software



3. Connect the USB One Wire adapter screw terminal to the One Wire network

For example bellow it is shown how to connect single DS18S20 temperature sensor to the adapter.

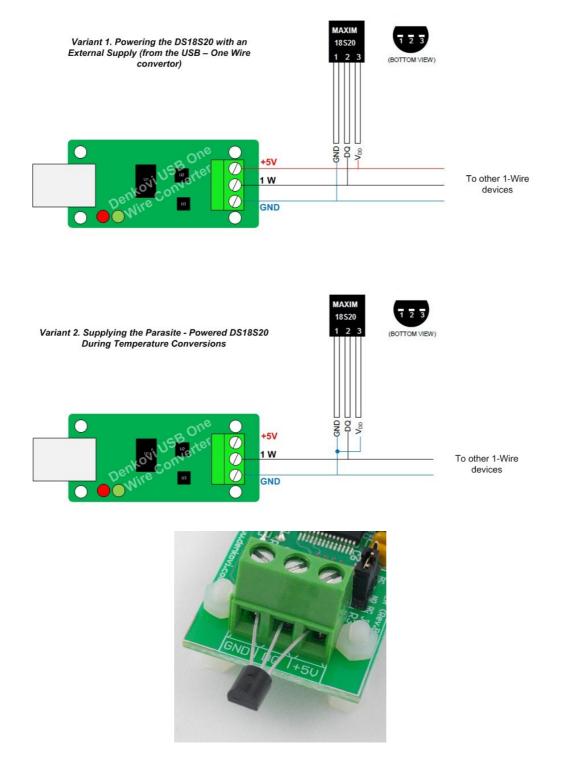

4. Connect the USB One Wire adapter to the PC via USB cable

Once the USB One Wire Adapter is recognized, its drivers must be installed. If this is not done automatically the drivers must be downloaded manually. Its chip set is FTDI FT232RL based. SO the drivers must be downloaded from here: http://www.ftdichip.com/Drivers/VCP.htm and after that installed. For installation quides http://www.ftdichip.com/Support/Documents/InstallGuides.htm

5. Connect the USB Four Relay Board to the PC via USB cable

Because the FTDI drivers should be already installed, now the USB relay board is installed correctly and should work properly after connecting to PC USB port.

6. Check in the Control Panel if the FTDI drivers are installed correctly

Check if the both FTDI base devices (USB One Wire adaptor and USB Relay Board) are shown at your Device Manager on the Control Panel. Note that it is recommend the USB One wire adaptor to be with Com Port number less than 10 because some one wire applications can not work with higher com port numbers.



In this tutorial, the both FTDI devices are shown as USB Serial Port in the Device Manager.



7. Install the One Wire drivers


Download and install the One Wire drivers from here: <u>http://www.maximintegrated.com/products/ibutton/software/tmex/index.cf</u> <u>m</u>

8. Download and install the Home Automation Software by Lanmisoft

You can download the software from this link: <u>lanmisoft.com/LS_HomeAutomation.exe</u> If you have issues with the installation, please read this article -<u>http://lanmisoft.com/Automation/Help/index.html?setup.htm</u>

9. Software configuration

 $1.1.\ensuremath{\mathsf{Run}}$ the Home Automation Software.

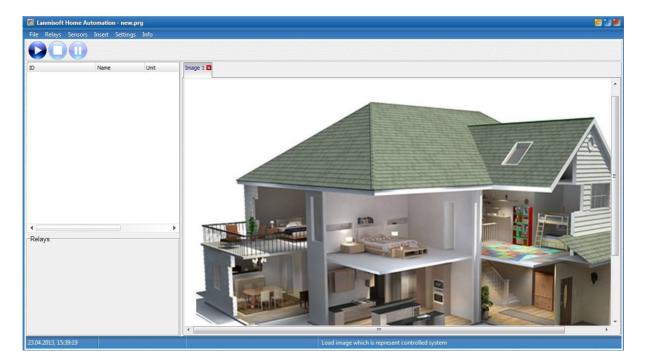



1.2. Detect the FTDI devices. Click Settings -> FTDI Devices -> Detect


📲 Lanmisoft Home Aut	omation - new.p	rg					
File Relays Sensors	Insert Settings	Info					
				den en en den en e			
D	Name	FTDI Devices Manager		an det de l'have de transmer		8	
		Chip	0 FTDI	devices has l	been detected		^
		Detected FTDI devices	Interface	Туре	I/O contact numbers	Define	
						Detect	
۲ Relays						Delete	
		Close and restart dev	ices Close				
			Sarah William				
23.04.2013, 15:41:52							

1.3.Check how many FTDI devices are connected. Normaly you will have 2 FTDI devices (The USB One Wire adapter - FT232R USB UART and USB Relay Board - FT245R USB FIFO). We use them for first time, that's why they are in yellow.

Lanmisoft Home Automation - new.prg						
File Relays Sensors Insert Settings Info						
	FTDI Devices Mana	aer				
ID Name Unit	TTDI Devices mana	yen -			an a	
	2 FTDI devices has been detected					Ń
	ID	Interface	Туре	I/O contact numbers	Define	
	A6VP0F5A A900WZ73	FT245R USB FIFO FT232R USB UART	[Undefined] [Undefined]	[Undefined] [Undefined]	Detect	
					Delete	
■ Relays There is no defined FTDI interface as relay I Go to Settings -> FTDI Devices in order to attached devices, or CLICK HERE	and the second					
	Close and restart	close				-
Number of FTDI devices: 2						•
23.04.2013, 15:45:32						



1.4.Configure the USB 4 Relay Board. The next step is to configure each FTDI Device. We start with the FT245R FIFO. This is USB 4 Relay Board, so that's why we must do the following settings:

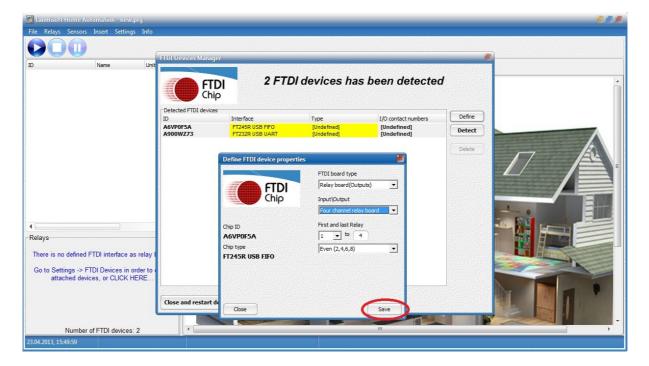


1.5.Configure the USB One Wire adapter. The FT232R USB UART chip is USB One Wire adaptor, so we must do the following settings:


📕 Lanmisoft Home Automation - new.prg							RK
File Relays Sensors Insert Settings Ir	nfo						
	FTDI Devices Man	ager			()		
ID Name			a deserved a second	un an each an tean an t			
	2 FTDI devices has been detected						•
	Detected FTDI dev	Interface	Туре	I/O contact numbers	Define		
	A6VP0F5A A900WZ73	FT245R USB FIF0 FT232R USB UART	4 channel relay board [Undefined]	1 - 4 [Undefined]	Detect		
			([]	Delete		
		Define FTDI device propert	ies	8	Delete	17 4	
			FTDI board type				
		ETDI	Other FTDI interface	-			
		FTDI Chip	Input\Output				
		and the second state	Four channel relay bo	ard 🚽			
•		Chip ID	First and last Relay				E
Relays	-	A900WZ73	1 <u>v</u> to 4				Ξ
		Chip type FT232R USB UART	Even (2,4,6,8)	_			R.
		TIESER OOD WIRT	FT232 Sensor Inte Custom	rface			
			description				
	100000000		Sensor interface				
	Close and restar	t de Close	6	Save			
							-
Number of FTDI devices: 2				III			F
23.04.2013, 15:54:45							



1.6.Restart the devices. Finally you should have the both FTDI devices defined in the following way. They are already in green. Just in case, click "close and restart the devices".

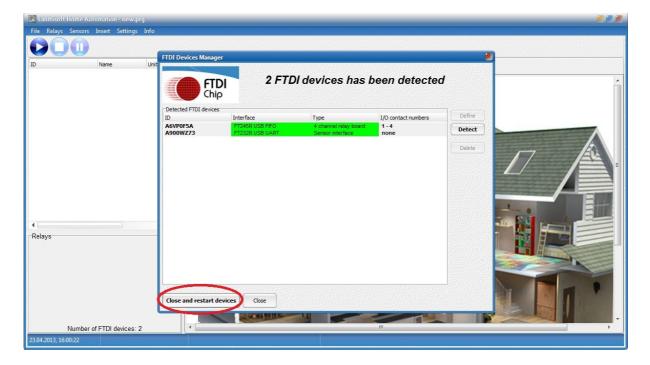


1.7.Adjust the sensor(s). At this moment the 4 relays are already placed and ready to be used. However we still don't see the DS18S20 sensor. For that purpose we must click Sensors -> 1-wire settings.

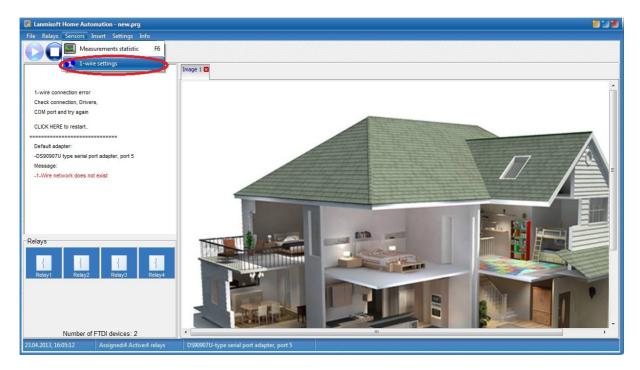



1.8. Detect the USB One Wire Adapter (shown as DS9097U). The software runs the Default 1-Wire Settings window. Click "Auto Detect" and after several seconds the Denkovi USB One Wire Adapter should be recognized as DS9097U. Click "Yes" button. After that click over the sensor window so you can refresh it. Here it is shown on Com Port 3. The maximum is 15, so be sure the USB One Wire Adapter is with Com Port Number less than 15.

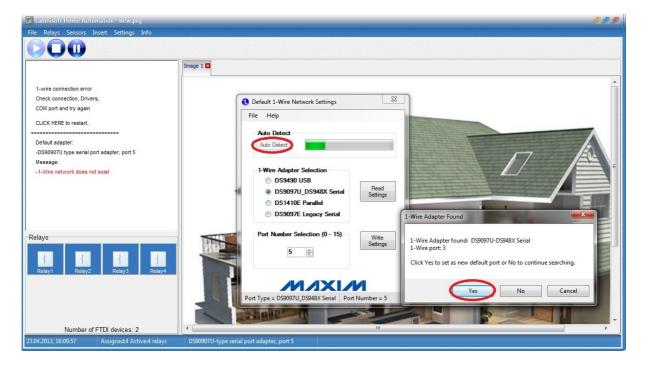

1.9. Start the process. Click "Play" button so the automation process can start.

